


How do I configure my DSR Series router for a PPPoE (DSL) Internet Connection?


Network Diagram

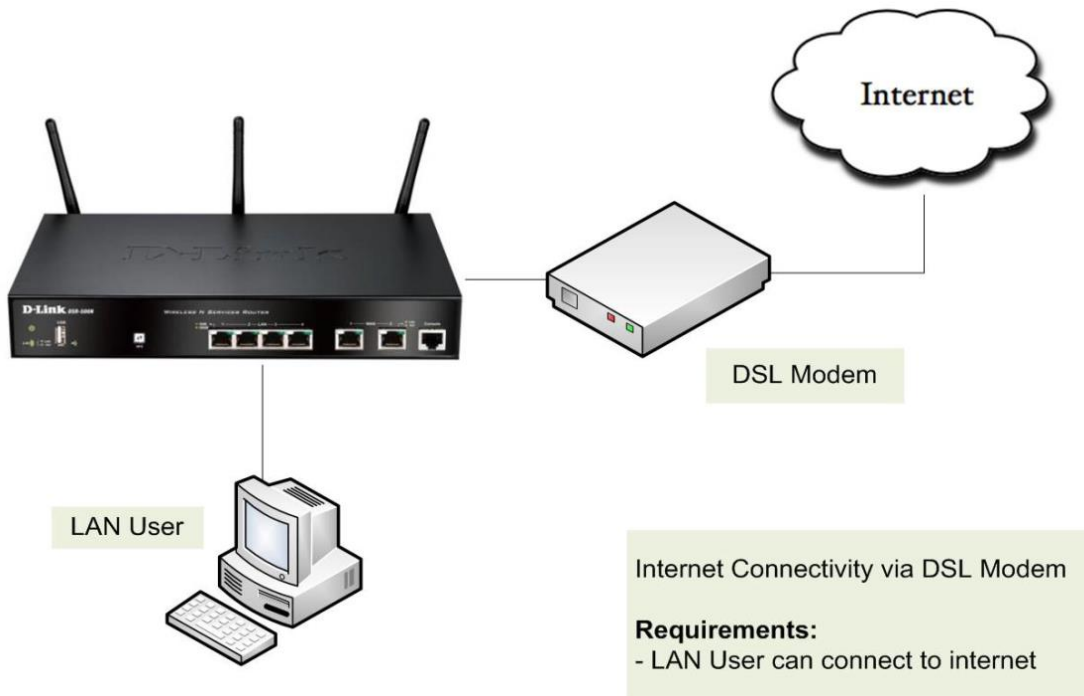

Step 1: Open your web browser and type in the IP address of the Firewall (<https://192.168.10.1> by default). Enter the username (admin by default) and password (admin by default), and click **Login**.

The screenshot shows the login page of the D-Link Unified Services Router (DSR-500N). The page has a blue header with the D-Link logo and the text "Unified Services Router - DSR-500N". Below the header, there is a message: "Please login to access D-Link Unified Services Router (DSR-500N) to manage and use the device." Underneath, there is a "Login" section with a white box containing two input fields: "Username" with the value "admin" and "Password" with four asterisks. A blue "Login" button is positioned below the password field.


Step 2: Click the **Network** tab on the top, and then click **WAN1 Settings**:

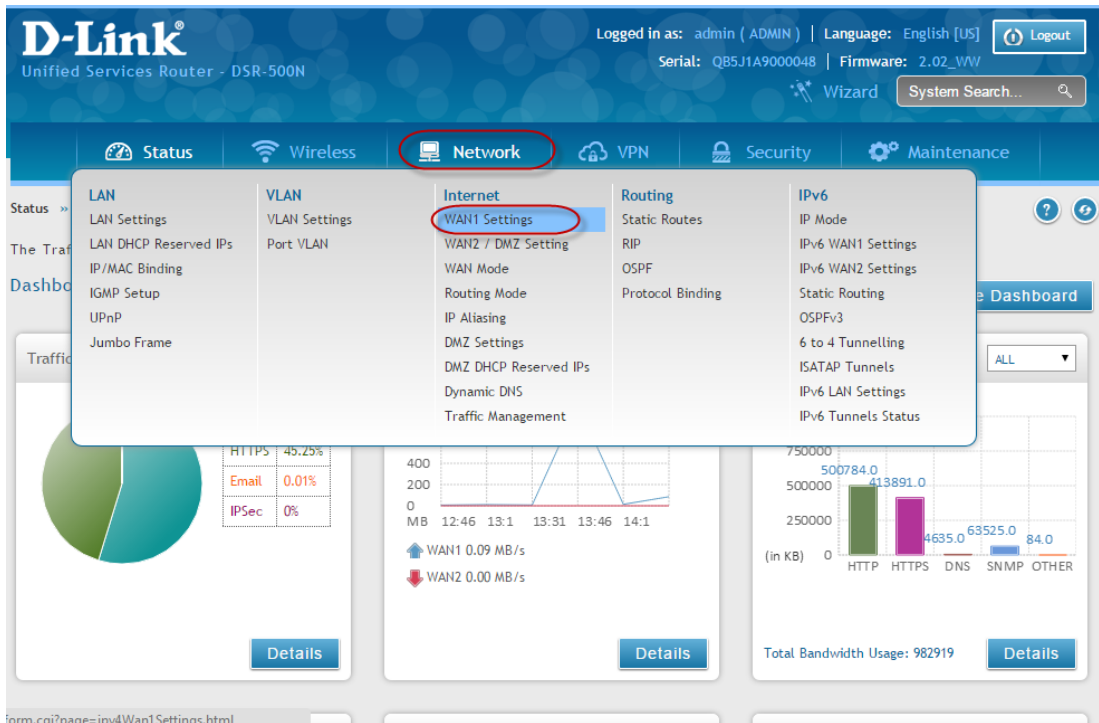

Step 3: From the Connection Type drop down box select PPPoE (Username/Password)

- **User Name:** The username for your internet account
- **Password :** The password for your internet account
- **Reconnect Mode:** Always On

Note: If you do not know your username or password, please check with your Internet Service Provider.

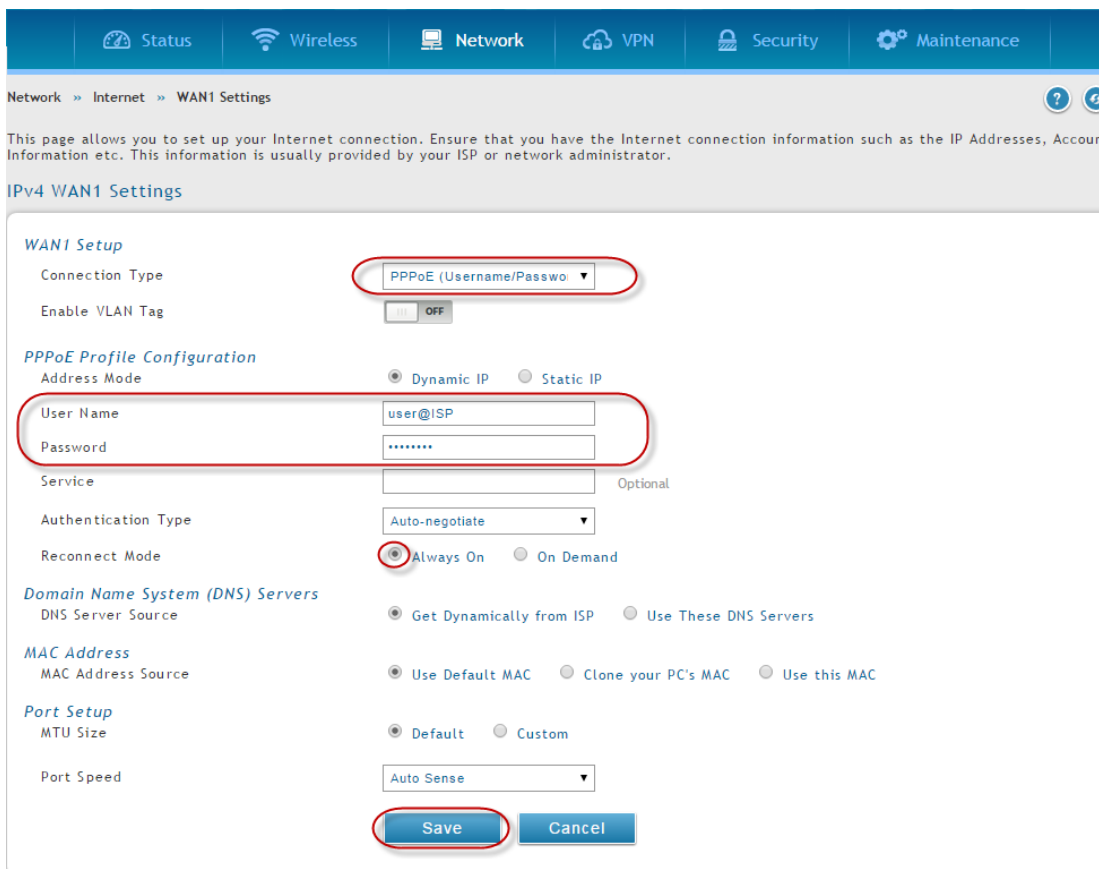

Step 4: Click Save Settings